

 
PLEASE READ BEFORE USE AND SAVE

Air Cleaning WindColumn™

Fan

with LCD Display and
Remote Control

INSTRUCTION MANUAL

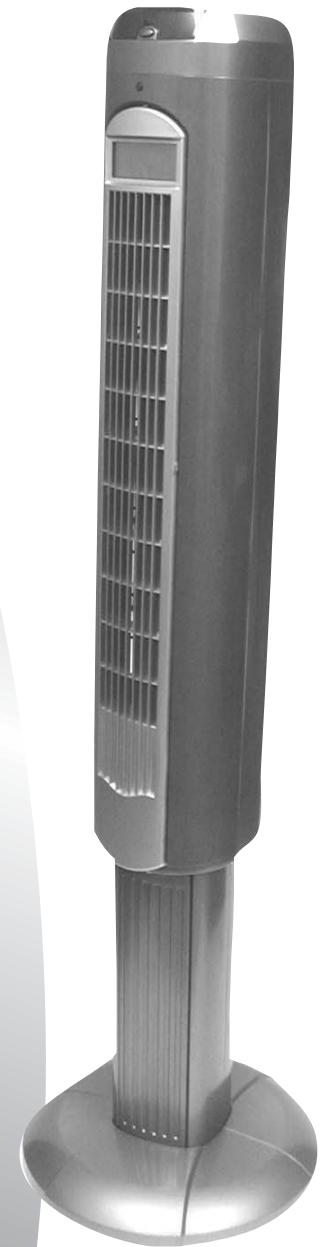

Developers of Home Comfort Products

an **EefaCo.** Store
1-800-667-8721



LIMITED WARRANTY

Limited Warranty Terms and Conditions

Three (3) Year Limited Warranty on Motor and One (1) Year Limited Warranty on All Other Parts

This warranty applies to repair or replacement if a product is found to be defective in material or workmanship. This warranty does not apply to any damage resulting from commercial, abusive and/or unreasonable use or supplemental damage. Defects as a result of normal wear and tear will not be considered manufacturing defects under this warranty. Read the instruction manual before attempting to use this product. WindChaser Products, Inc. is not liable for incidental or consequential damages of any nature. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights which vary from state to state. This warranty applies only to the original purchaser of this product. WindChaser Products, Inc. will repair or replace this product if it is found to be defective in material and/or workmanship. Defective product should be returned to the place of purchase in accordance with store policy. Thereafter, while within the warranty period, any defective product should be returned to WindChaser Products, Inc.. This warranty does not cover damage resulting from unauthorized attempts to repair or from any use not in accordance with its manual.

an *Eefa*Co. Store
1-800-667-8721

CLEANING AND STORAGE

1. Turn the unit OFF and unplug the unit before cleaning.
2. Use only a soft, damp cloth to clean the exterior. A can of compressed air or a vacuum cleaner can be used to clean the interior
3. Do not immerse the unit in water and never allow water to drip into the motor housing.
4. Do not use gasoline, paint thinner or other chemicals to clean the fan.
5. Store the fan in it's original box and store in a cool, dry place.

NOTE: If you experience a problem, please return the unit to the place of the original purchase or see your warranty. Do not attempt to open the motor housing yourself. Doing so may void your warranty and cause damage to the fan or personal injury.

an **EefaCo.** Store
1-800-667-8721

CONTENTS

Air Cleaning WindColumn™ **Fan** with LCD Display and Remote Control

Before Initial Use	2	
For Your Safety	3	
Parts and Assembly	4	
MODEL	Preparation	5
	Operating Instructions	6-7
	Cleaning and Storage	8
	Limited Warranty	9



BEFORE INITIAL USE

Read this Entire Instruction Manual Before Use.

Attach your purchase receipt here

For your reference:

Serial No. _____ Date of Purchase _____

Name and Address of Dealer _____

DEFAULT THERMOSTAT

Press the mode button until 73°F (Default Temperature) is viewed on the LCD Screen. When the feature is activated, the fan speed will change automatically with changes in the room temperature.

For Example:

Low Speed: Room Temperature is between 73-75°F, **Med Speed:** Room Temperature is between 76-78.4°F, **High Speed:** Room Temperature is between 79°F or above.

CUSTOM THERMOSTAT

To lower or raise the temperature manually, press the up and down arrow buttons on the remote control. Once the desired temperature has been set, the fan will alternate through the fan speeds to maintain the set temperature.

For Example:

If your room temperature is 78°F and want to set it to 73°F, simply set the temperature to 73°F using the up and down arrows on the remote control. Then the fan will adjust to lower the temperature in the room. As soon as the desired temperature is reached, the fan will stop.

Note: When the fan is unplugged and plugged back in, the temperature will set to its default setting (73°F)

5. OSCILLATE (🌀)

Press to turn the oscillation function ON or OFF.

6. ION GENERATOR (👤)

Press to turn ion generator ON or OFF.

 
NOTE: The ion generator produces negatively charged ions which remove airborne contaminants such as smog, pollen and dust.

7 - 10. INDICATOR LIGHTS

Indicate which functions are ON or OFF. All Functions correspond to the Indicator Lights on the Control Panel (Fig. 5) and Icons on the LCD Display (Fig. 7).

an *Eefa*Co. Store
1-800-667-8721

OPERATING INSTRUCTIONS

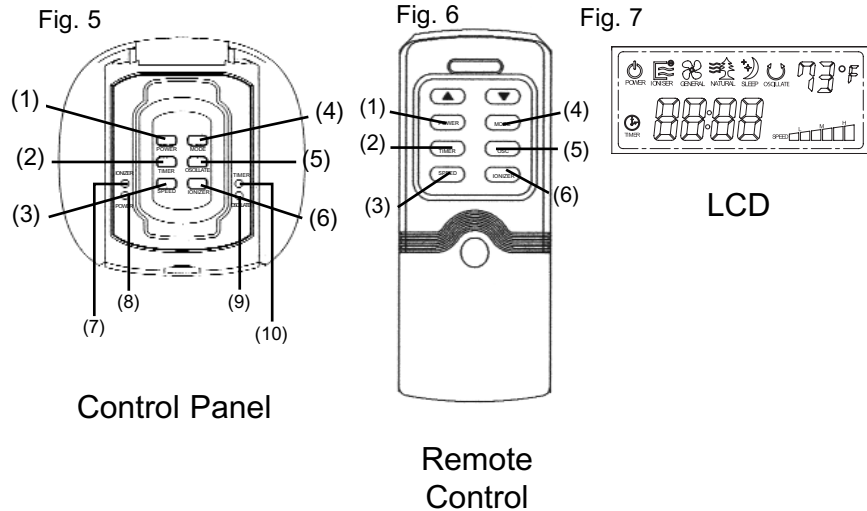

The unit can be operated by the Control Panel (Fig. 5) or the Remote Control (Fig. 6).

1. POWER (🔌)

Press to turn the unit ON or OFF.

2. TIMER (🕒)

Press to set the timer to automatically shut off the fan after 1/2 hour. Each additional press of the button will add one half hour to the timer setting up to a maximum of 9 hours.

***Note: To set the digital clock on the fan, turn the fan off, then press the Speed button to set the hours and Timer button to set the minutes.**

3. SPEED (📊)

Press to select Low, Medium or High fan speeds.

4. WIND MODES

The wind modes will alternate the fan's speeds to simulate a natural breeze.

(🌿) Natural Wind Mode and (🌙) Sleep Wind Mode.

an **SefaCo.** Store
1-800-667-8721

FOR YOUR SAFETY

IMPORTANT INSTRUCTIONS

Read and save these important safety instructions before using this fan. When using electrical appliances, basic safety precautions should always be followed including the following:


- 1) Use this fan only as described in this manual. Other uses not recommended may cause fire or electric shock.
- 2) This product is intended for household use ONLY and not for commercial, industrial or outside use.
- 3) To protect against electrical shock, do not place fan in window, immerse unit, plug or cord in water, or spray with liquids.
- 4) Close supervision is necessary when any appliance is used by or near children.
- 5) Unplug the fan from the outlet when not in use, when moving fan from one location to another and before cleaning.
- 6) Do not operate the fan in the presence of explosive and/or flammable fumes.
- 7) Do not place the fan or any parts near an open flame, cooking or other heating appliance.
- 8) Do not operate the fan with a damaged cord, plug, after a malfunction or if dropped or damaged in any manner.
- 9) Avoid contact with moving fan parts.
- 10) To disconnect, grip the plug and pull it from the wall outlet. Never yank the cord.
- 11) The use of attachments is not recommended and may cause hazards.
- 12) Always use on a dry level surface.
- 13) Do not operate if the fan housing is removed or damaged.
- 14) This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

WARNING: To reduce the risk of fire or electrical shock, DO NOT USE THIS FAN WITH ANY SOLID STATE SPEED CONTROL DEVICE.

SAVE THESE INSTRUCTIONS

PARTS

 Fig. 1

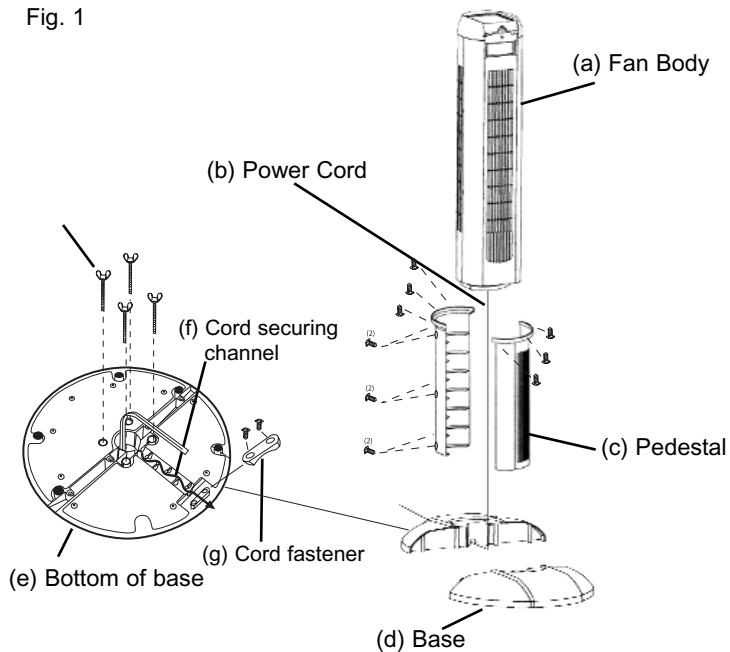

ASSEMBLY INSTRUCTIONS

Fig. 1

1. Pass the power cord (b) through the “Front” and “Back” pedestal pieces (c).
2. Snap the two parts of the pedestal (c) together (the back being the side with the holes) and secure with the six screws using a Phillips (cross-head) screwdriver. Fix the pedestal to the bottom of the Fan Body (a) with the six short screws with a Phillips (cross-head) screwdriver.
3. Pass the power cord (b) through the center hole of the base after snapping the two pieces together (The back piece is the one with the power cord securing channel).
4. Line up the pedestal on the base. Fix with the 4 long butterfly screws (h) by turning the screws.
5. Weave the cord through the cord securing channel and place the cord fastener (g) over the cord and secure with the two screws.

an *Eefa*Co. Store
1-800-667-8721

PREPARATION

1. Remove the cover from the back of the remote control.
2. Insert two AAA dry-cell batteries.
3. Do not use rechargeable batteries because they differ from standard dry cell batteries in shape, dimension and performance.
4. Be sure to replace the batteries with two new batteries of the same type.
5. Remove the batteries if the fan is not going to be used for an extended period of time.
6. The plastic cover on the remote can be moved up and down by pressing up or down on the grip. (Fig. 2)
7. For storage place the remote control into the compartment behind the fan. (Fig. 3)
NOTE: The compartment has a spring loaded release and catch device. Insert the remote until you hear a click. Then the remote will be secured in the compartment. To remove the remote, push the remote in and the tip of the remote will pop out.
8. To open the control panel lid, press on the cover release button (Fig.4).

A CHANGE IN THE FUNCTION IS USUALLY INDICATED BY A BEEP.

