

Airpura Limited Warranty

5 years on parts and 10 years labor

an **EefaCo.** Store
1-800-667-8721

Airpura

AIR PURIFIERS




Operating & Filter Replacement Directions

T600

Thank You for choosing an
Airpura High Efficiency Air Purifier
To bring you the benefits of clean indoor air

To Begin Using Your Airpura...

- Inspect the exterior of your Airpura to verify there is no damage from shipping. If any damage is noted please follow the instructions in the Airpura returns policy.
- Wipe the unit with a damp cloth to remove any dust from packaging
- Plug the unit into a regular grounded 110 volt outlet
- Turn on the unit to MAX and allow it to run for a few minutes
- Set the variable speed control to the level you wish
- The most efficient way to use your Airpura for regular air quality maintenance is to run it at a low speed 24 hours a day 7 days a week

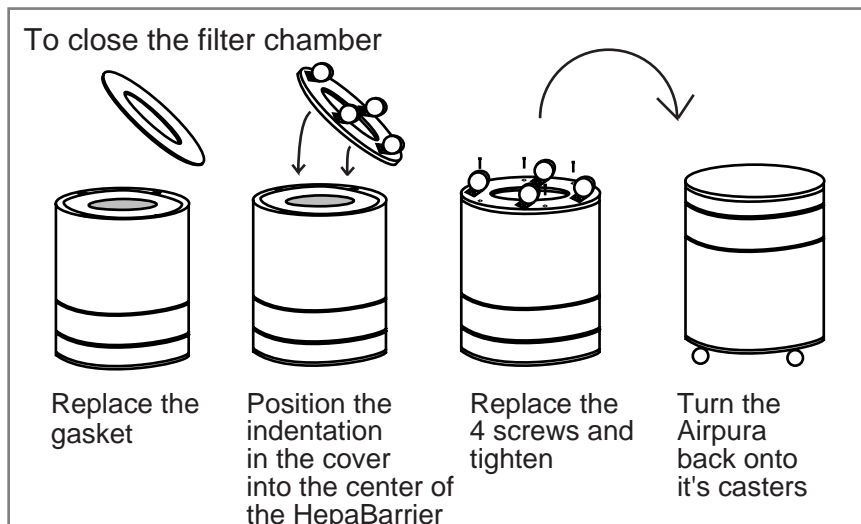

Feel the difference breathing clean air makes
to your health


Filter Maintenance and Replacement

The TarBarrier

- Can be vacuumed from the exterior of the unit once a month or more often.
- Should be replaced between 1 to 3 months of use

To vacuum the TarBarrier

- Use the brush attachment on your vacuum cleaner
- Vacuum slowly around the mesh surface of the filter chamber

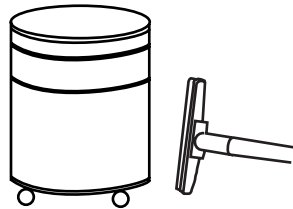

The Activated Carbon Filter

- Should be changed as needed in heavy applications and at least every 24 months in normal use.

The HEPA-Barrier

- Should be replaced at least every 12 months of normal use


To open the filter chamber

Turn over the Airpura


Remove the 4 retaining screws

Take off the cover

Remove the gasket

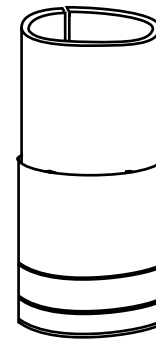


Position the pTarBarrier inside the filter chamber

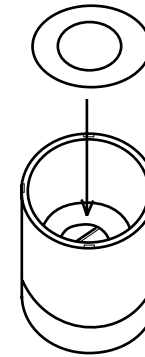


Place a felt gasket at the bottom of the filter chamber




Unfold the filter slider (Supplied with replacement filters or on request Part#6F 001)

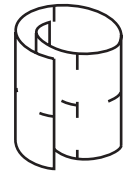


Roll it into a spiral

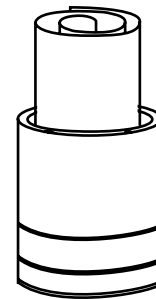


Insert the tube into the filter chamber inside the pre-filter

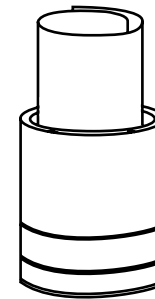


Let the spiral open to fill the opening

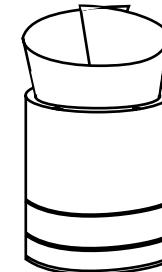


Open the top of the spiral to make a slight funnel

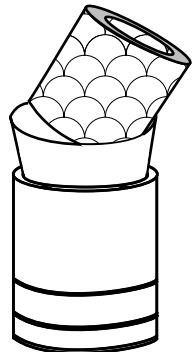


Insert the carbon canister into the funnel and hold it straight

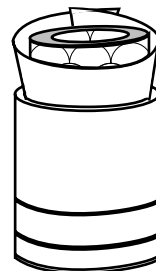



Let the canister slid down the filter slider

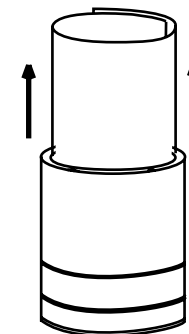

Pull the filter slider up out of the cavity using both hands and let the canister slide to the bottom of the cavity

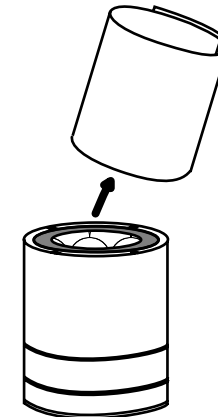

Remove the filter slider and fold it for further use

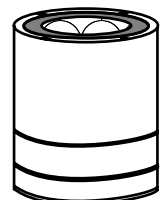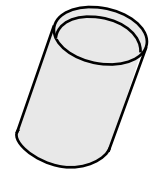

Slide in the HepaBarrier

See over for closing the filter chamber